




## **AK-U-TEMP – \$24.95**

Template for accurately prepping doors for deadbolts and doorknobs.

Measurements for 1 3/8" and 1 3/4" thick doors, and 2 3/8" and 2 3/4" backsets.

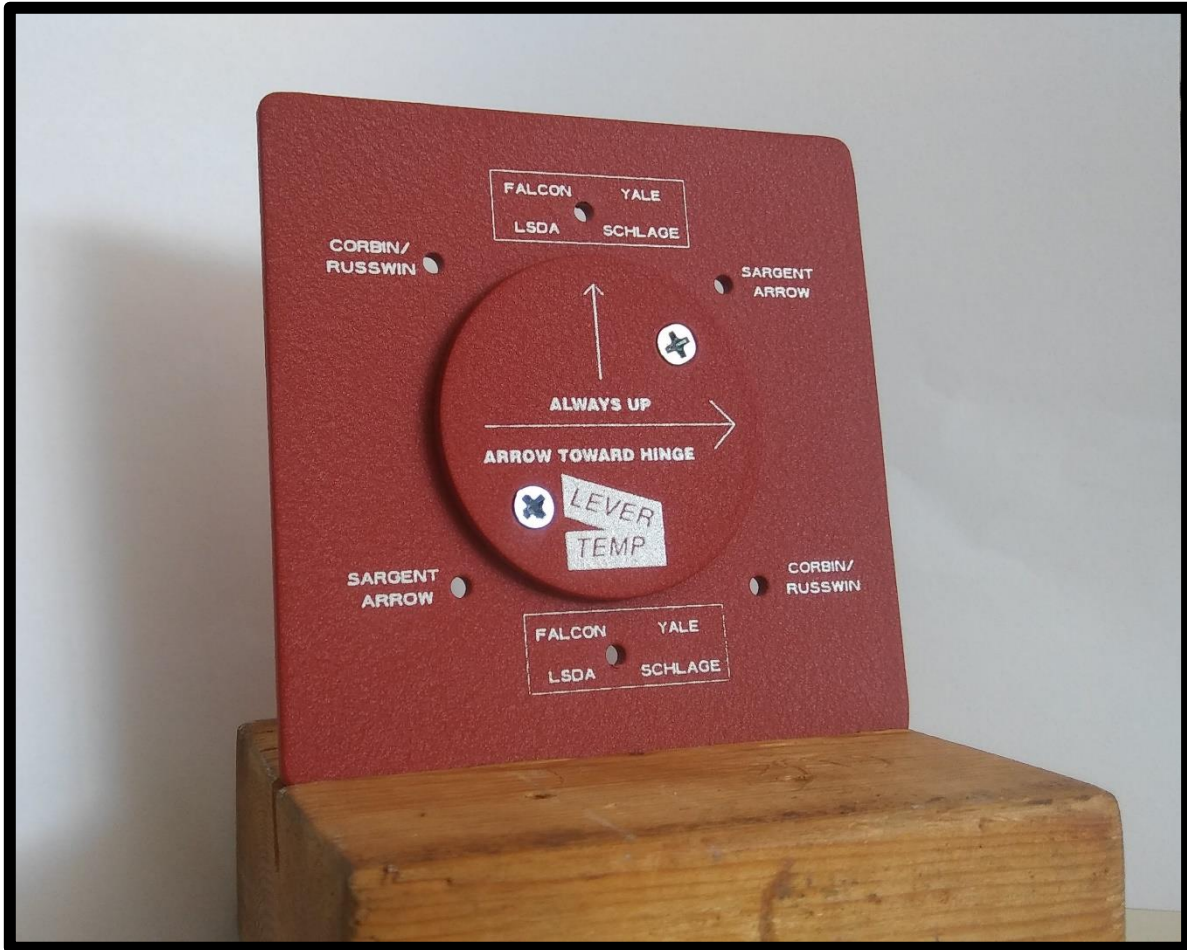

## **LEVER-TEMP - \$24.95**

Template for accurately prepping doors for levers.

Drill points for Sargent, Arrow, Yale, Falcon, Schlage, Corbin Russwin, and LSDA.

# DET - 5000

## Installation Template For DETEX ECL-230 & 230D-PH Exit Control Device

Determining The Hand Of A Door...  
Standing outside facing the door...  
If the hinges are on the Left It is a Left hand door  
If the hinges are on the Right It is a Right hand door

Outside Cyl Only —●— Left Hand

Right Hand —●— Outside Cyl Only

### Directions

1. Determine the hand of the door.
2. Measure the appropriate height for LH or RH.
  - a. Left Hand 42 5/8 from floor to center strike hole
  - b. Right Hand 43 3/8 from floor to center strike hole
3. With a pencil, mark strike and mounting holes.
4. If using an outside cylinder, mark LH or RH.
5. If weather stripping is present, mark the upper and lower edge of the strike flange.
6. Loosen the weather stripping screws and slide a piece of cardboard underneath it.
7. Carefully cut the upper and lower marks on the weather stripping making sure not to scar the door frame. This will give you an exact fit for your strike.
8. Center punch, drill & install

Manufactured By  
Mobile Locksmith Inc.  
John Blackburn & Son  
Gainesville, FL

**DET - 5000 -**  
**\$24.95**

Template for  
accurately  
prepping doors  
for Detex ECL-  
230 and 230D-PH  
exit devices.

**SM-7000**  
Installation Template For  
Simplex 1000 Series Combination Locks

1/4 "      1 "      1/4 "  
6 mm      25mm      6mm

Thumb Turn Or Key By-Pass Cylinder Only

1 "      25 mm

**Directions**

1. Insert template into existing 2 1/8" hole.
2. With a square, align the template vertically with the edge of the door.
3. With a pencil or scratch awl, mark all appropriate holes and remove template.
4. Drill all holes through with an 1/8" drill to avoid splintering.
5. Drill all holes half way through, from each side of the door with the correct drill bit size.
6. Install lock.

Manufactured By:

**mobile  
locksmith**

John Blackburn & Son

[www.MobileLocksmithInc.com](http://www.MobileLocksmithInc.com)

Gainesville, FL  
352-378-0870

**SM – 7000 -**

**\$24.95**

Template for  
accurately  
prepping doors  
for Simplex 1000  
Series  
combination  
locks.





**TR - 6000 -**

**\$24.95**

Template for  
accurately  
prepping doors  
for Trilogy T2 &  
T3 electronic  
cylindrical locks.



**BENCH ORGANIZER - \$24.95**

Turn your locksmith friends green with envy with this stylish and durable workbench tool organizer!

Tools and WD-40 not included!